
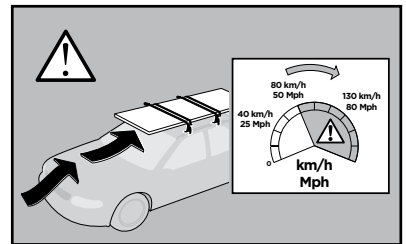
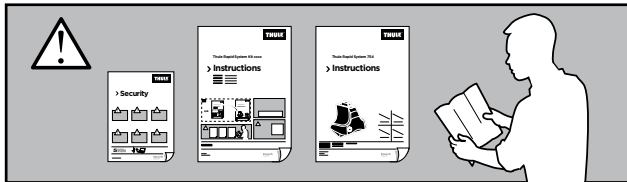
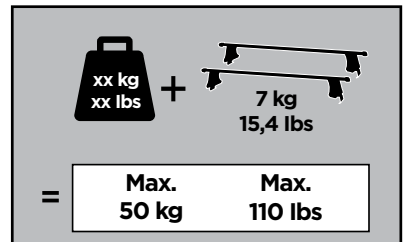


Thule Rapid System Kit 1692

> Instructions

FORD Fusion, 4-dr Sedan, 13-




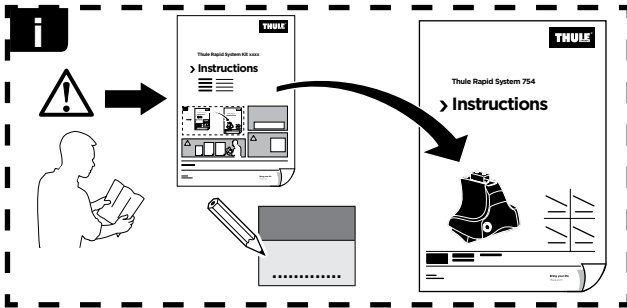


ISO 11154-E


141692

C.20120911
519-1692-01

Bring your life
thule.com

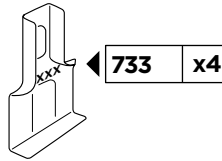



x1

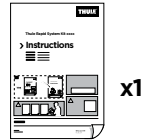

x1

1



	X (scale)	X (mm)	X (inch)
FORD Fusion, 4-dr Sedan, 13-	47,5	1126	44 ³/₈

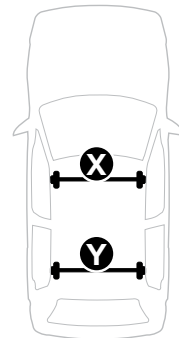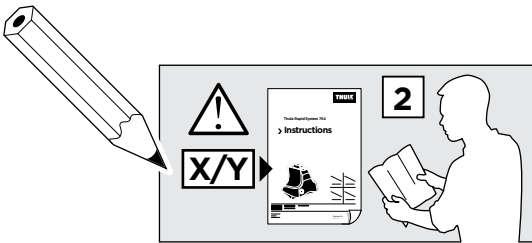


	Y (scale)	Y (mm)	Y (inch)
FORD Fusion, 4-dr Sedan, 13-	46,5	1116	43 ⁷/₈

2

FORD Fusion, 4-dr Sedan, 13-

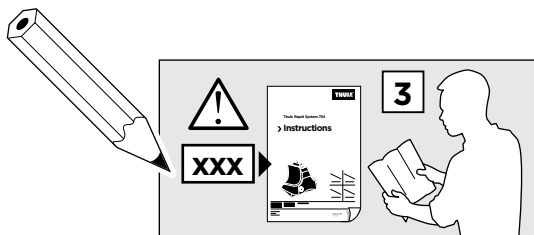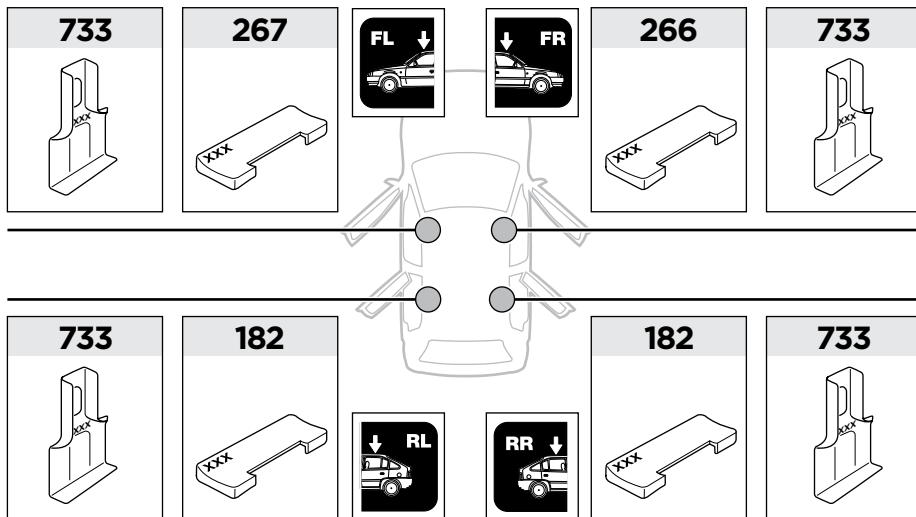

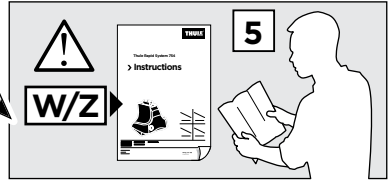3

	W (mm)	Z (mm)	W (inch)	Z (inch)
FORD Fusion, 4-dr Sedan, 13-	279	635	11	25

