







Thule Rapid System Kit 1737

> Instructions

FORD Escape, 5-dr SUV, *12-



*North America

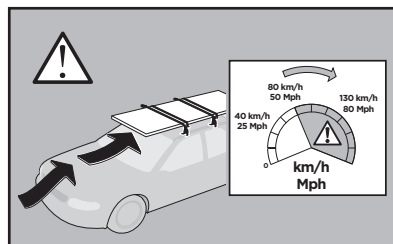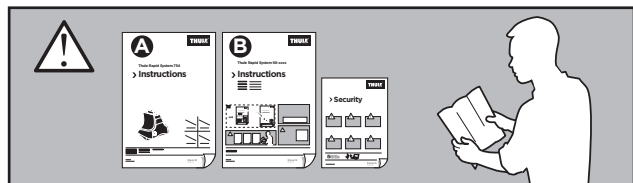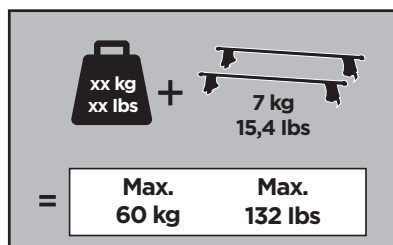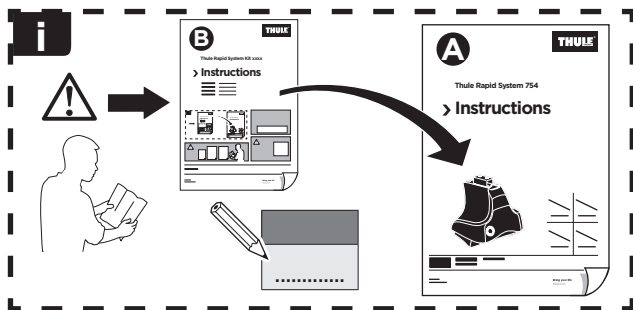

ISO 11154-E



141737
C.20130701
519-1737-01

Bring your life
thule.com

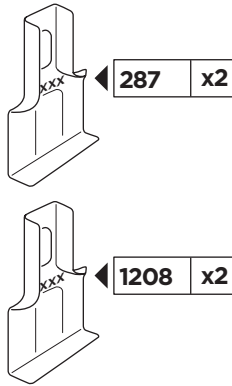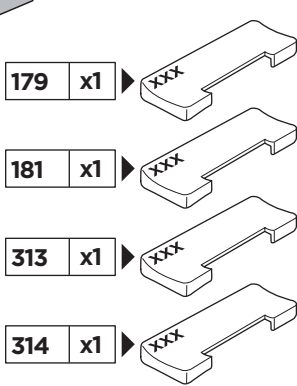

1


	X (scale)	X (mm)	X (inch)
FORD Escape, 5-dr SUV, *12-	46,5	1116	43 7/8

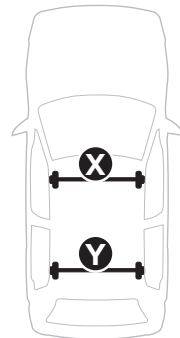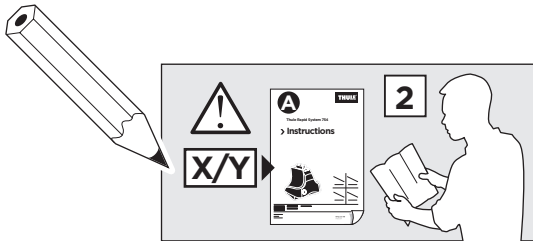


	Y (scale)	Y (mm)	Y (inch)
FORD Escape, 5-dr SUV, *12-	40	1051	41 3/8

2

FORD Escape, 5-dr SUV, *12-

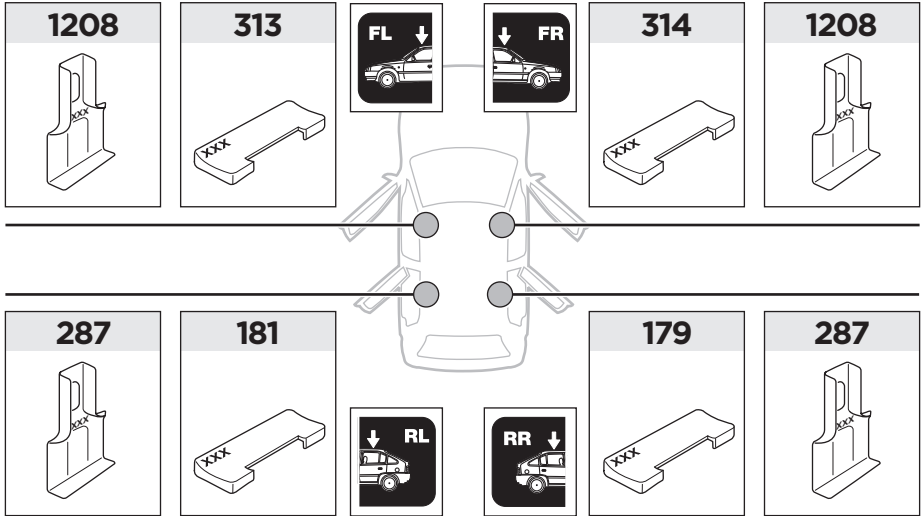

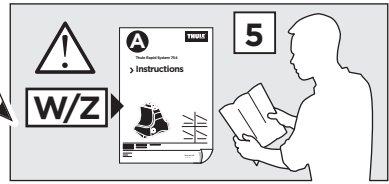3

	W (mm)	Z (mm)	W (inch)	Z (inch)
FORD Escape, 5-dr SUV, *12-	305	711	12	28

