




Thule Rapid System Kit 1850

> Instructions

PEUGEOT 3008, 5-dr SUV, 17-
PEUGEOT 5008, 5-dr SUV, 17-

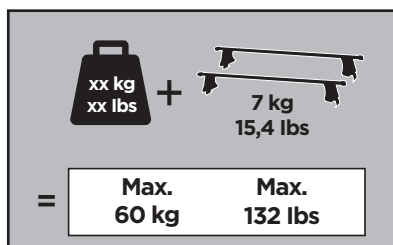

ISO 11154-E

141850
20170817
519-1850-02


Bring your life
thule.com



173 x1 ▶

174 x2 ▶

175 x1 ▶



◀ 1406 x4






x1



x1

1


	X (scale)	X (mm)	X (inch)
PEUGEOT 3008 , 5-dr SUV, 17-	43,5	1086	42 ³/₄
PEUGEOT 5008 , 5-dr SUV, 17-	43,5	1086	42 ³/₄

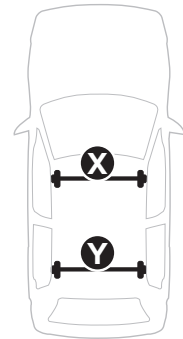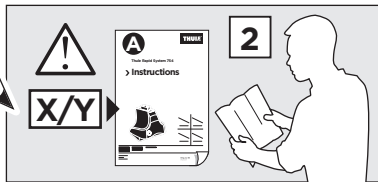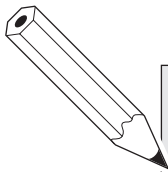


	Y (scale)	Y (mm)	Y (inch)
PEUGEOT 3008 , 5-dr SUV, 17-	41	1061	41 ³/₄
PEUGEOT 5008 , 5-dr SUV, 17-	40,5	1056	41 ¹/₂

2

PEUGEOT 3008, 5-dr SUV, 17-
PEUGEOT 5008, 5-dr SUV, 17-

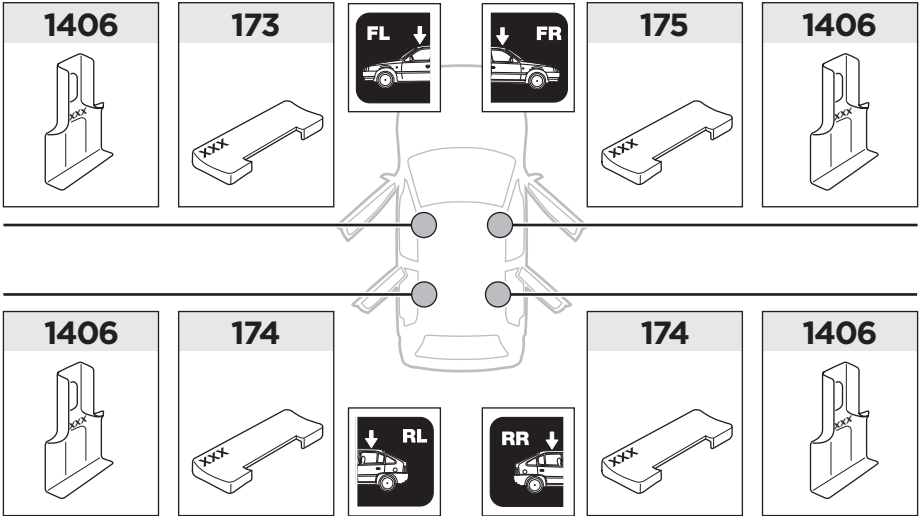

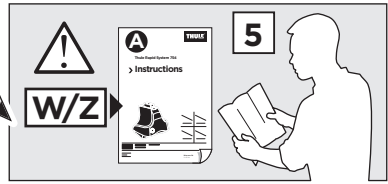3

	W (mm)	Z (mm)	W (inch)	Z (inch)
PEUGEOT 3008 , 5-dr SUV, 17-	265	715	10 ³/₈	28 ¹/₈
PEUGEOT 5008 , 5-dr SUV, 17-	250	715	9 ⁷/₈	28 ¹/₈

