
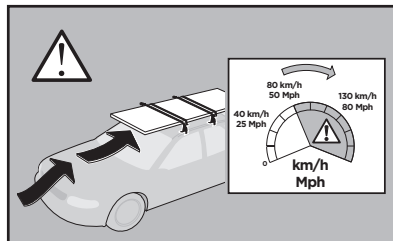
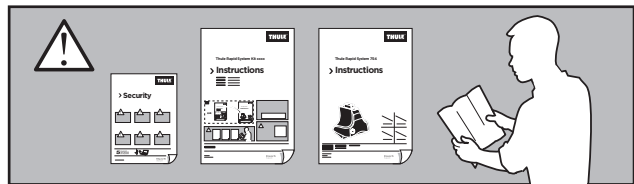
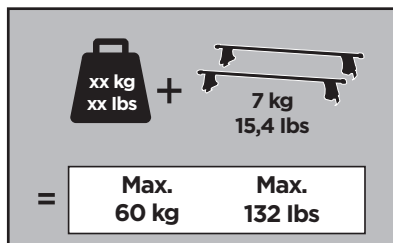


Thule Rapid System Kit 1470

> Instructions

CHRYSLER Voyager LX, 5-dr MPV, 08–

LANCIA Voyager, 5-dr MPV, 08–

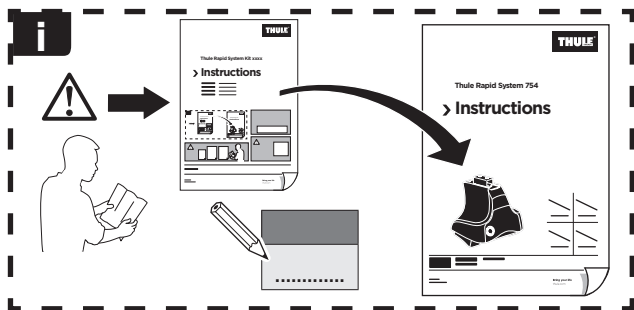

ISO 11154-E

141470




C.20130107
519-1470-02

Bring your life

thule.com





x1

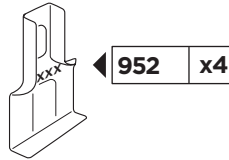

x1

1



	X (scale)	X (mm)	X (inch)
CHRYSLER Voyager LX , 5-dr MPV, 08-	55	1201	47 ¹ / ₄
LANCIA Voyager , 5-dr MPV, 08-	55	1201	47 ¹ / ₄

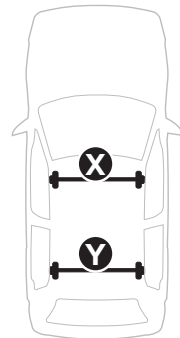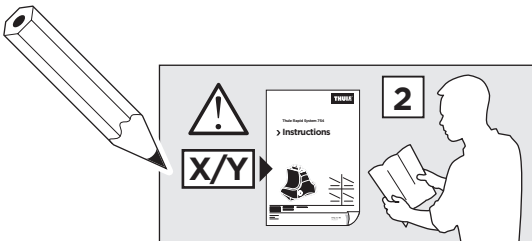


	Y (scale)	Y (mm)	Y (inch)
CHRYSLER Voyager LX , 5-dr MPV, 08-	51	1161	45 ³ / ₄
LANCIA Voyager , 5-dr MPV, 08-	51	1161	45 ³ / ₄

2

CHRYSLER Voyager LX, 5-dr MPV, 08-
LANCIA Voyager, 5-dr MPV, 08-

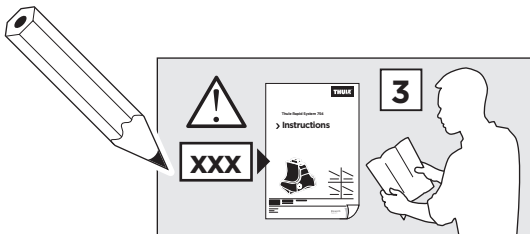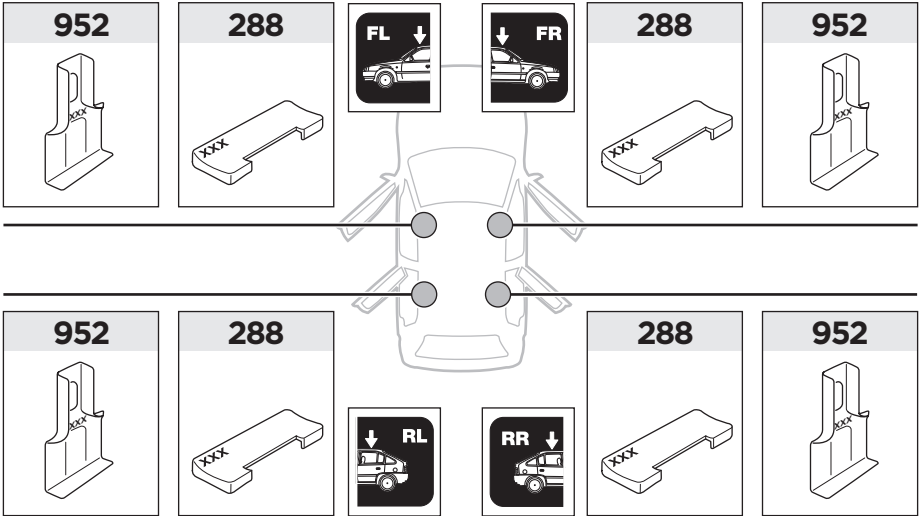

3

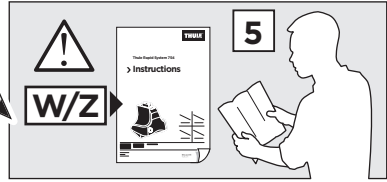

	W (mm)	Z (mm)	W (inch)	Z (inch)
CHRYSLER Voyager LX , 5-dr MPV, 08-	635	760	25	29 ⁷ / ₈
LANCIA Voyager , 5-dr MPV, 08-	635	760	25	29 ⁷ / ₈

