






## Thule XT Kit 3155

# > Instructions

- CITROËN** Jumpy, 4-dr Van, 16-
- CITROËN** SpaceTourer, 5-dr Bus, 16-
- PEUGEOT** Expert, 4-dr Van, 16-
- PEUGEOT** Traveller, 5-dr Bus, 16-
- TOYOTA** ProAce, 4-dr Van, 16-
- TOYOTA** ProAce Verso, 5-dr Bus, 16-

This kit is only for vehicles with fixpoint mounting.

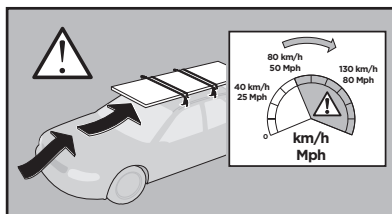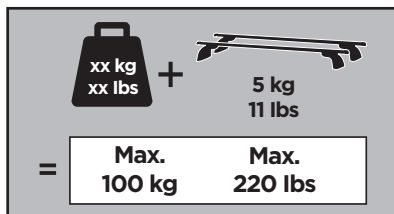
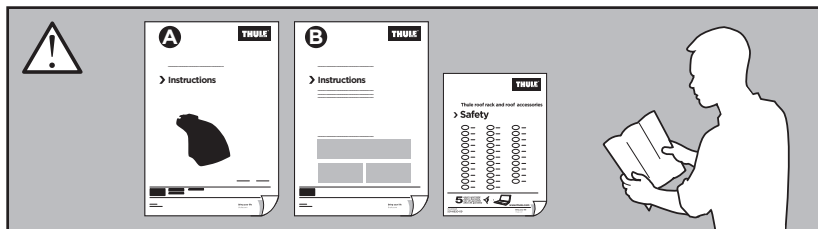


ISO 11154-E






183155

C.20160920  
509-3155-01


Bring your life  
thule.com

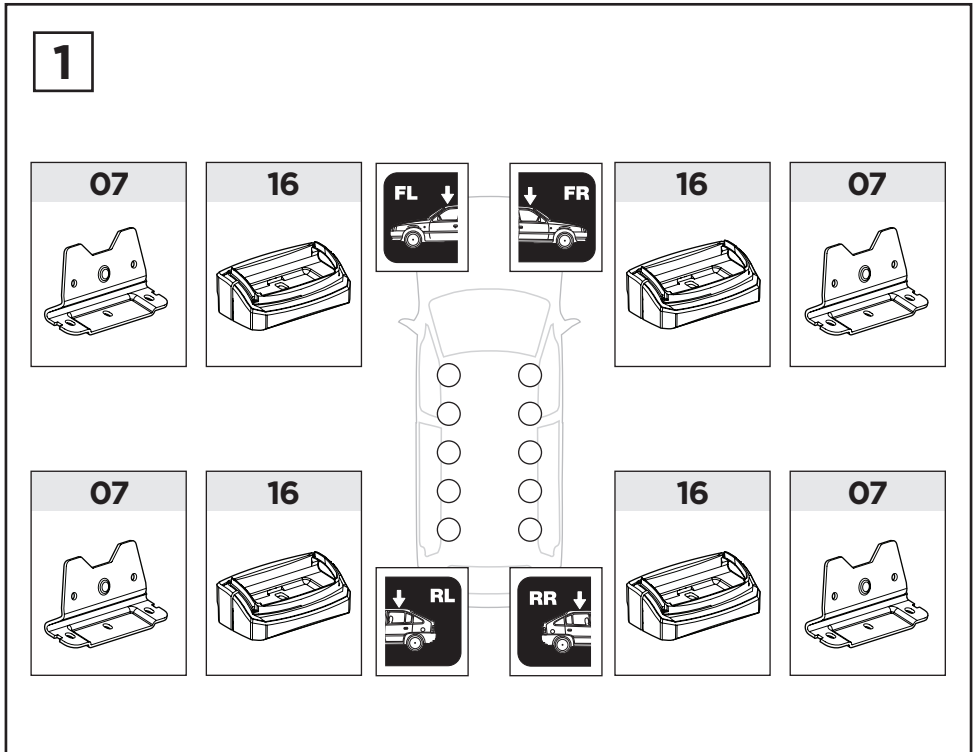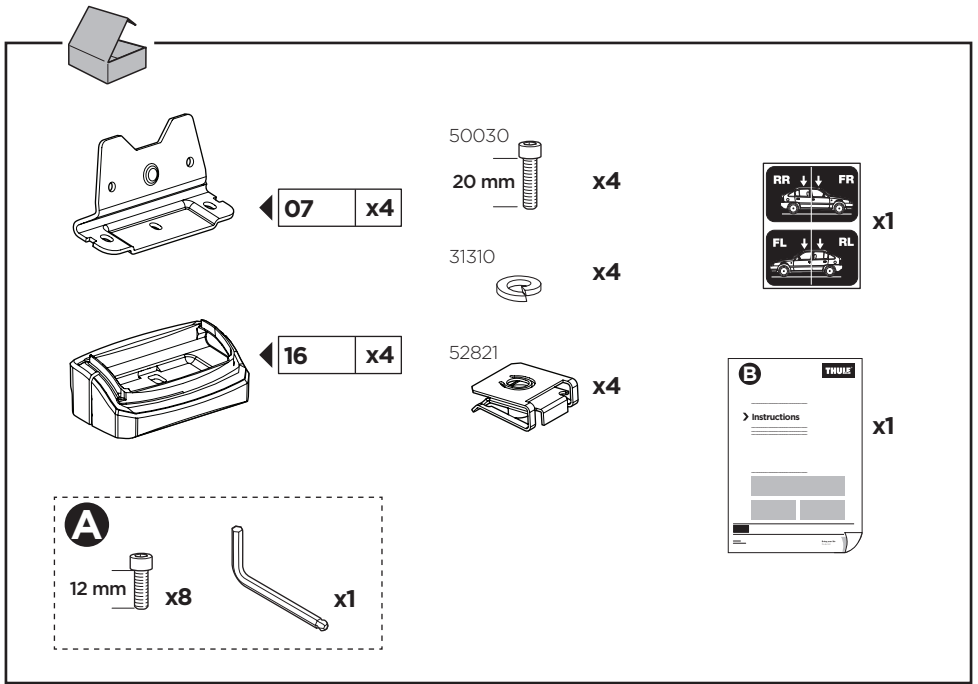


2

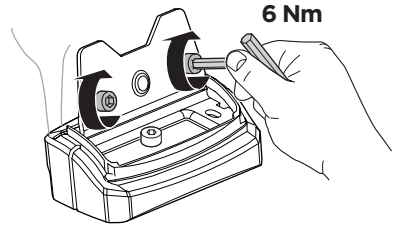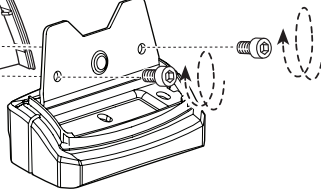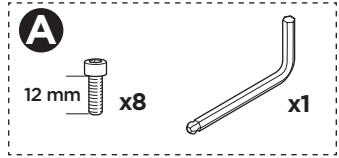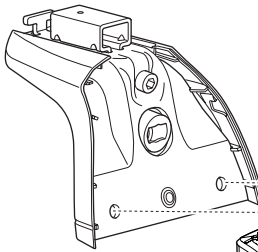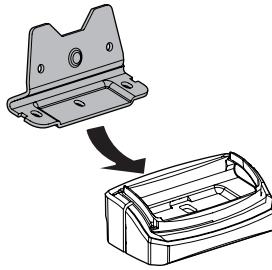



3




x1

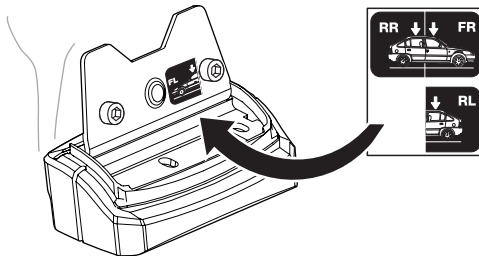


**4**




**A**

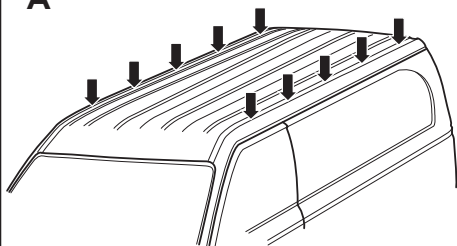


**B**

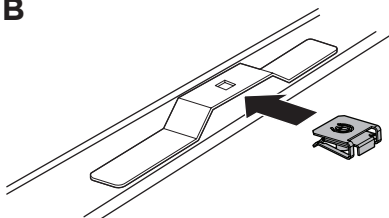

**C**

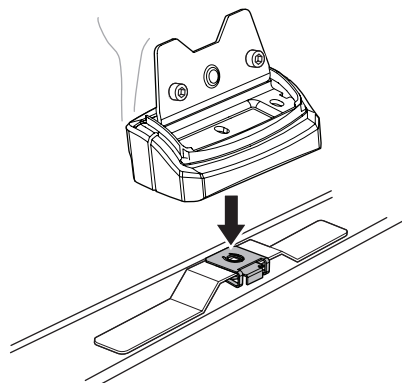

**D**

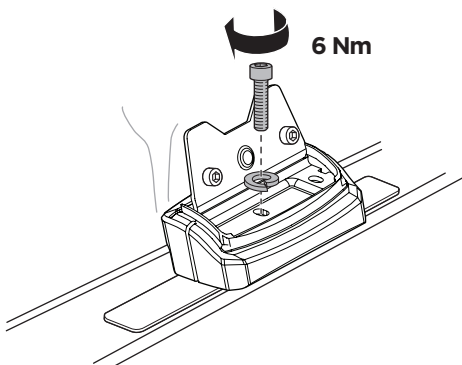

**5**

