






## Thule XT Kit 3141

# > Instructions

NISSAN Murano, 5-dr SUV, 15-

This kit is only for vehicles with fixpoint mounting.

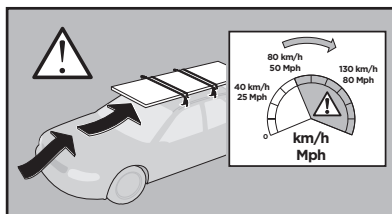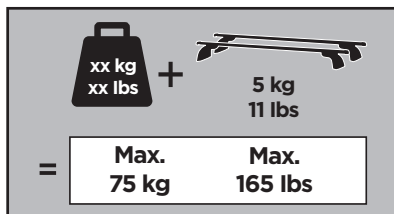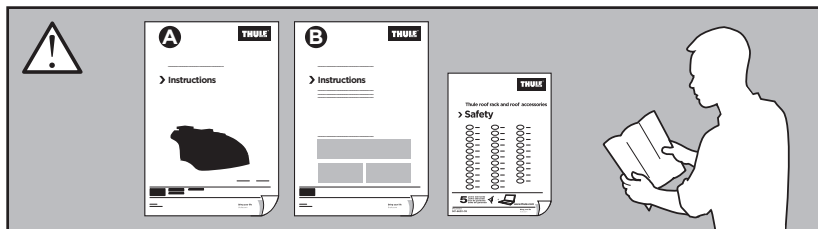


ISO 11154-E

183141


C.20161005  
509-3141-01

Bring your life

thule.com



◀ 10 x4




◀ 54 x4





50435 x8



52376 x1




x1

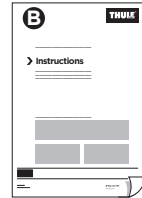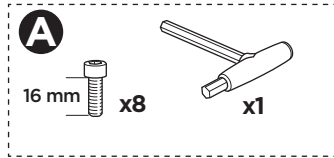


x1

1

10



54




FL ↓




↓ FR




54




10



10



54




↓ RL



RR ↓



54



10

