

Kit 3021

FIAT Doblo, 3-dr Van, 00-03, 04-05, 06-09

FIAT Doblo, 4-dr Van, 00-03, 04-05, 06-09

FIAT Doblo, 5-dr Van, 00-03, 04-05, 06-09

FIAT Doblo Maxi, 4-dr Van, 08-09

FORD Tourneo Connect, 5-dr Bus, 03-

FORD Transit Connect, 4-dr Van, 03-




MERCEDES Citan, 4-dr Van, 12-

NISSAN Kubistar, 5-dr Van, 04-

RENAULT Kangoo, 5-dr Van, 98-02, 03-07, 08-

RENAULT Kangoo Maxi, 5-dr Van, 10-

This Kit is only for vehicles with fixpoint mounting.

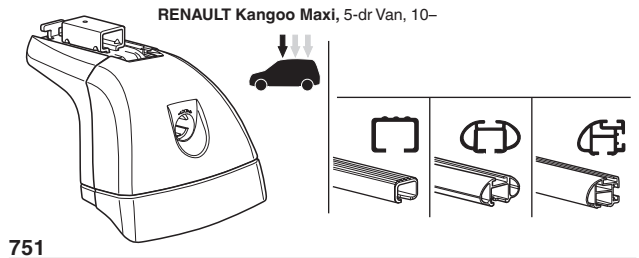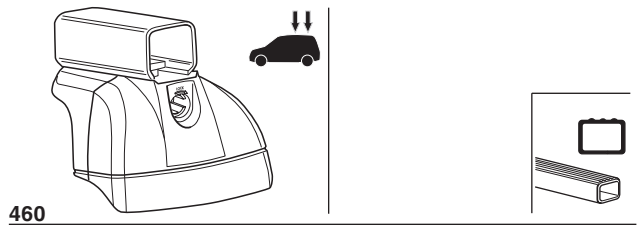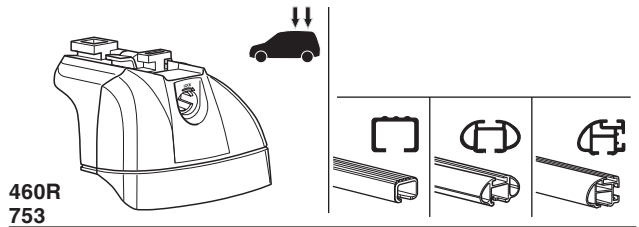

6 kg / 13 lbs + xx kg / xx lbs = **Max. 75kg**
Max. 165 lbs

9 kg / 20 lbs + xx kg / xx lbs = **Max. 100kg**
Max. 220 lbs

Warning: Do not exceed weight limits. Arrows indicate load distribution on the roof rack.

THULE Kit XXXX
instructions
THULE

Warning: Wind speed limits for safe travel with the rack.



80 km/h	130 km/h
50 Mph	80 Mph
40 km/h	25 Mph

km/h
Mph

A: Clean the roof surface with a brush and bucket.
B: Wipe the roof surface with a cloth.
C: Position the rack on the roof.

Kit

- 01 x 4
- 26 x 2
- 27 x 2
- 31464 M6x30 mm x 4
- 50603 M8x40 mm x 4
- FR, RR, FL, RL (1 x 1)
- 50786 x 4
- 50229 x 1 (6 mm)

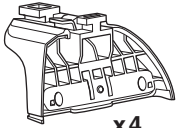

753

x4




x4



x4



16 mm
x8




x1



x4



x1

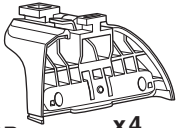

460R

x4



x4



x4




16 mm
x8



x1



x4

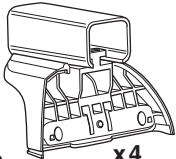

460

x4



x4



x4




16 mm
x8



x1



x4

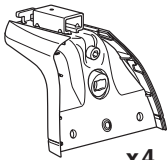

751

x4



x4



x4



12 mm
x8




x1



x4



x1



x2



x1

17 mm



x2

23 mm



x2

23 mm




x2




x2

17 mm




x2


23 mm



x2




x2



x2


25 mm



x2



x4



x4



x4



x2

x2


x4

x4



x1
5 mm


1






753/460R






460

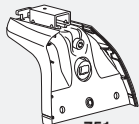


751

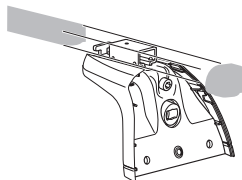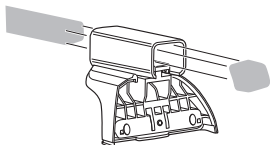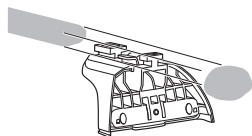




x4

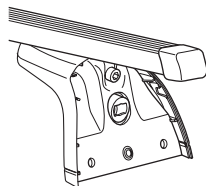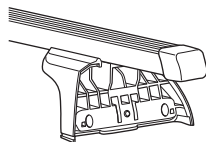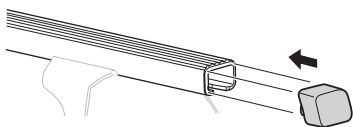

x4

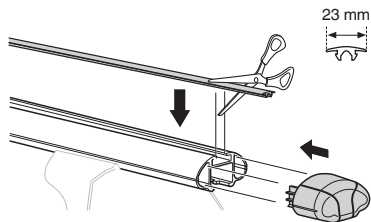




23 mm

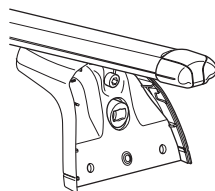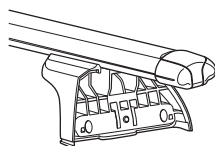





x4

x4

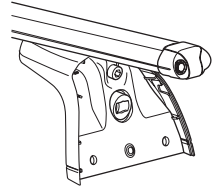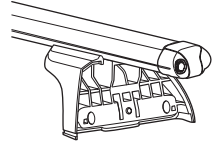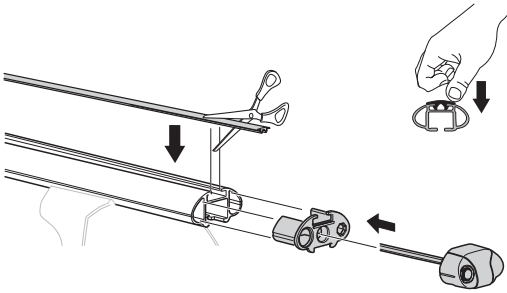

x4

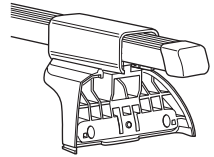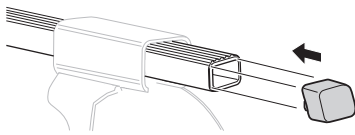




x2

x2


x4

x4


x1
5 mm

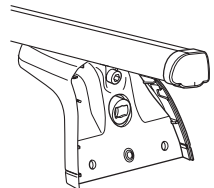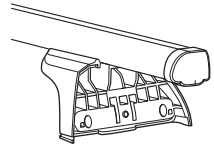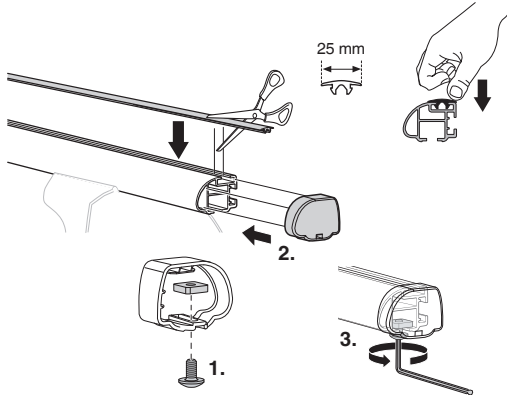

2




01 x 4

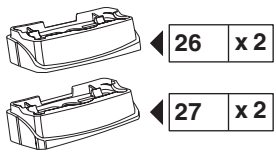


26 x 2













27 x 2



16 mm x 8




x 1

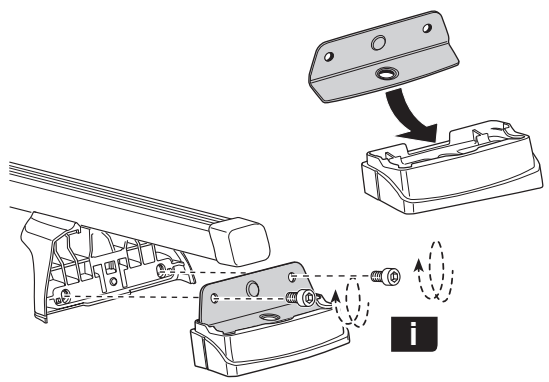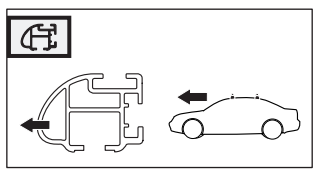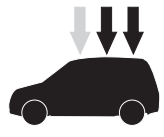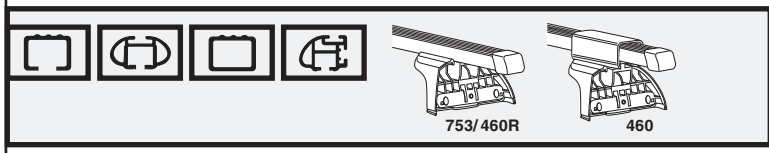

i

- GB** Only a few turns
- D** Nur wenige Umdrehungen
- F** Quelques tours uniquement
- NL** Slechts enkele slagen
- I** Solo qualche giro
- E** Sólo algunas vueltas
- PT** Noções básicas
- S** Endast några varv
- FIN** Vain muutama kierros
- EST** Ainult mõni pööre
- LAT** Tikai dažī apgriezieni
- LIT** Tik keli pasukimai
- PL** Wystarczy kilka obrotów
- RU** Достаточно нескольких оборотов
- CZ** Pouze několik otáček
- SK** Len niekoľko otáčok
- SLO** Le nekaj obratov


- HR** Samo nekoliko okreta
- HU** Csak néhány fordítás
- GR** Μόνο μερικές στροφές
- TR** Yalnız birkaç kez çevirm
- 中文** 只有几个转向
- 한국어** 두 세번만
- 日本語** 数回転のみ
- ไทย** หมุนเพียงไม่กี่รอบ

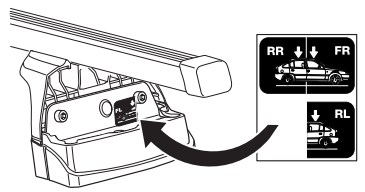

2



01 x 2



26 x 1




27 x 1




x 4



x 1

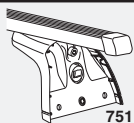


751


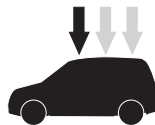


RENAULT Kangoo Maxi, 5-dr Van, 10-

01







27

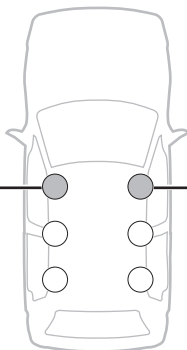


01





26

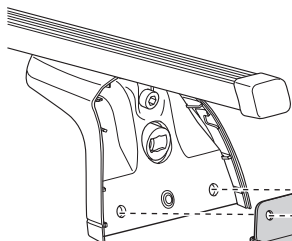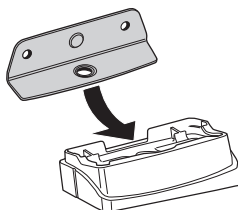


6 Nm


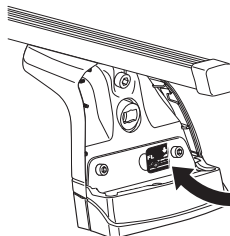


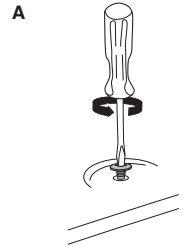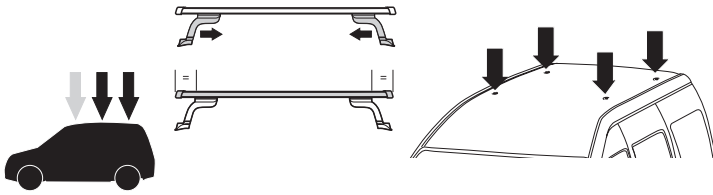3



B **FIAT Doblo**, 3-dr Van, 00-03, 04-05, 06-09
FIAT Doblo, 4-dr Van, 00-03, 04-05, 06-09
FIAT Doblo, 5-dr Van, 00-03, 04-05, 06-09
FIAT Doblo Maxi, 4-dr Van, 08-09

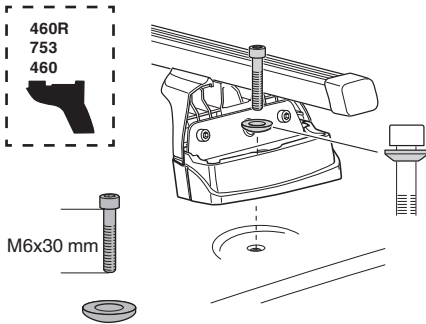




FORD Tourneo Connect, 5-dr Bus, 03-
FORD Transit Connect, 4-dr Van, 03-
MERCEDES Citan, 4-dr Van, 12-
NISSAN Kubistar, 5-dr Van, 04-
RENAULT Kangoo, 5-dr Van, 98-02, 03-07, 08-
RENAULT Kangoo Maxi, 5-dr Van, 10-

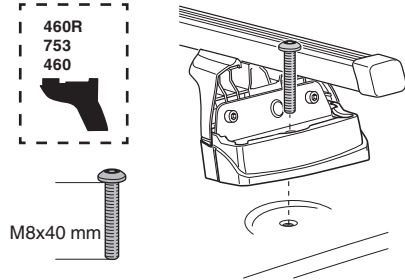**C** **FIAT**





FORD
MERCEDES
NISSAN
RENAULT

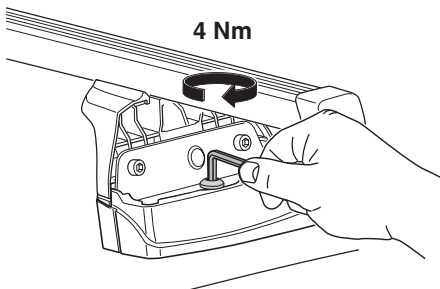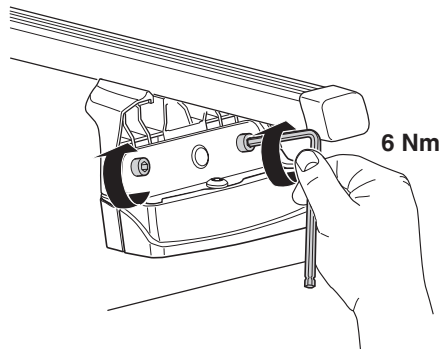**D**

3

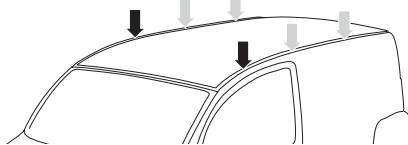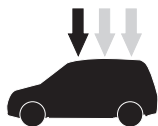

A RENAULT Kangoo Maxi, 5-dr Van, 10-

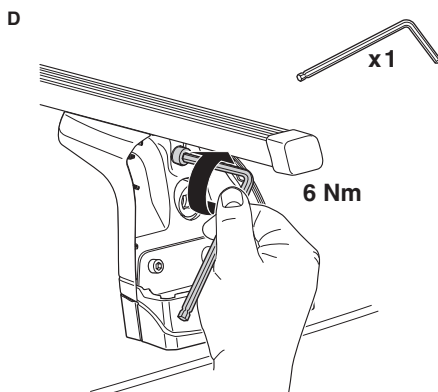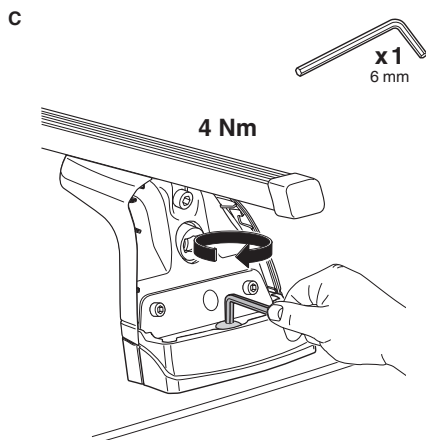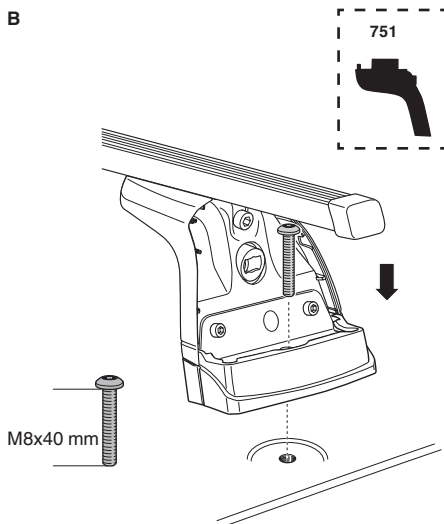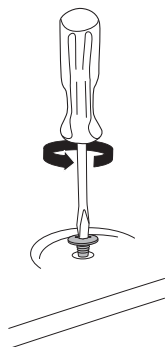

4



x4


753



x4



x1

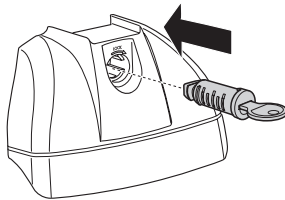


x4

460/460R



x4

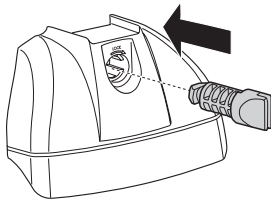

x4


751



x4





x1

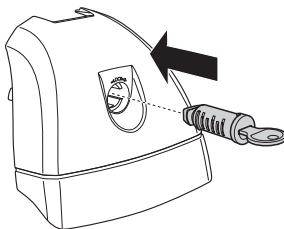



5



753 x4

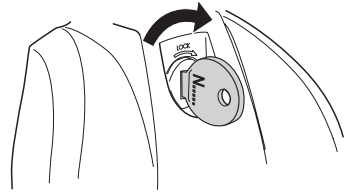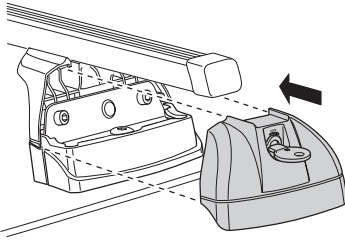


460/460R x4

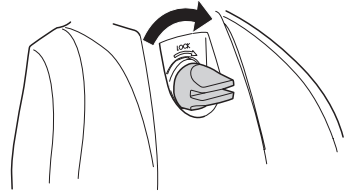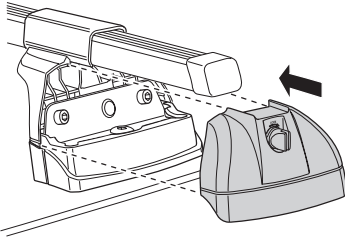



5 mm




x1





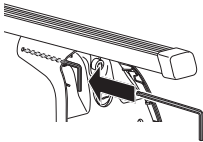


751 x4

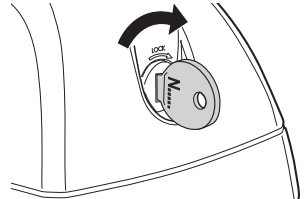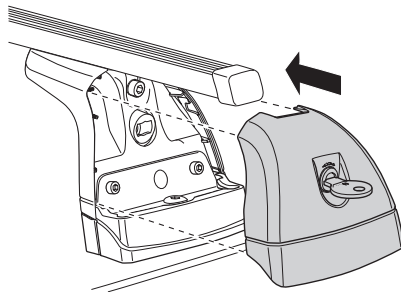


6

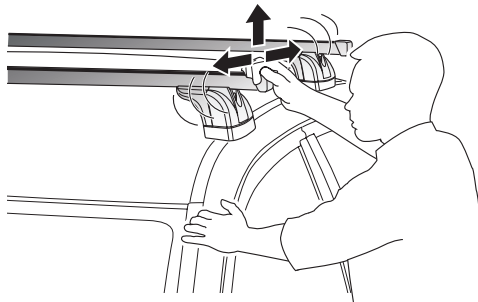

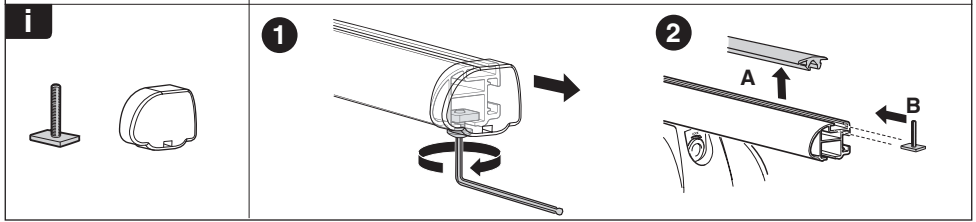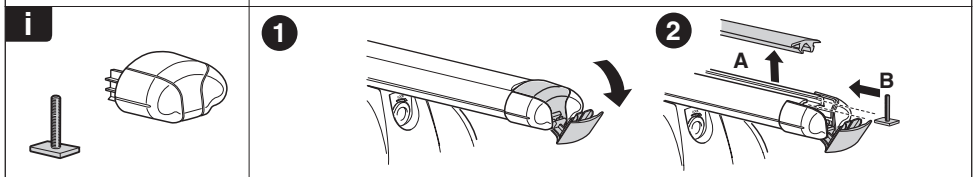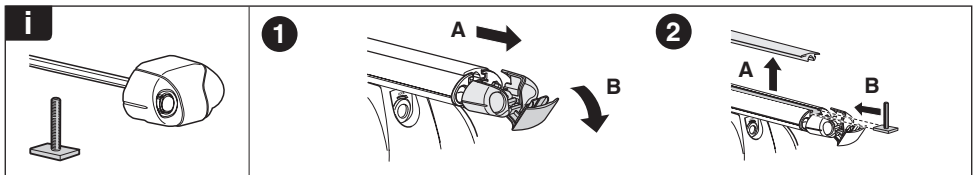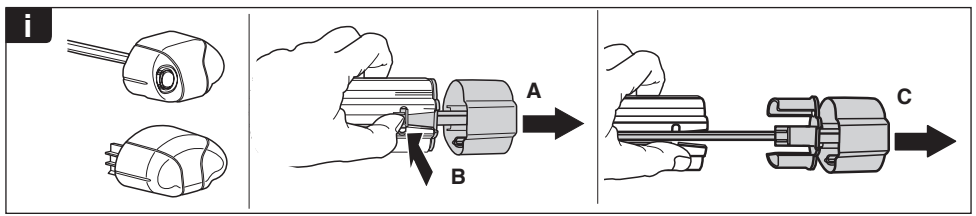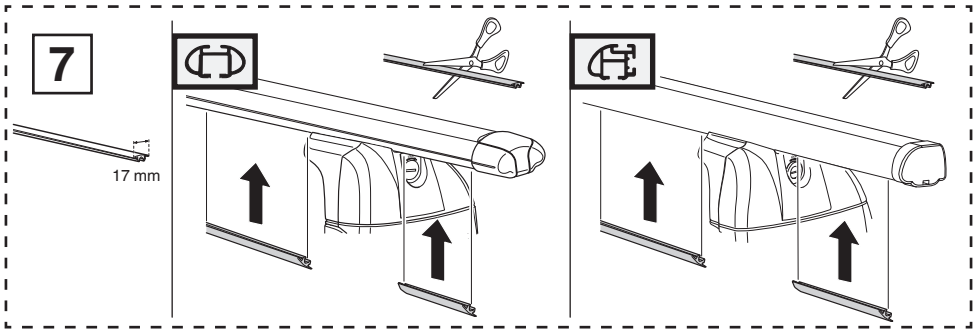

THULE
SWEDEN
**ONE
KEY
SYSTEM**

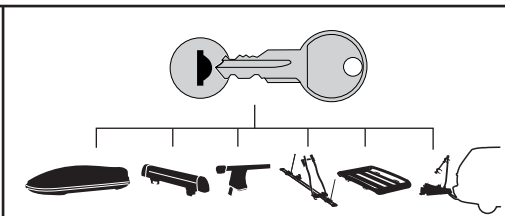

- 544 (x4)
- 596 (x6)
- 588 (x8)
- 510 (x10)
- 518 (x10)
- 452 (x12)