





Thule Rapid System Kit 1001

> Instructions

AUDI 80/90, 4-dr Sedan, 87-91, 92-94

AUDI 4000, 4-dr Sedan, 87-91

AUDI 100/200, 4-dr Sedan, 83-90

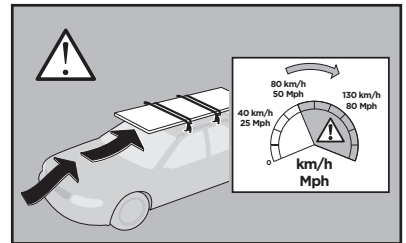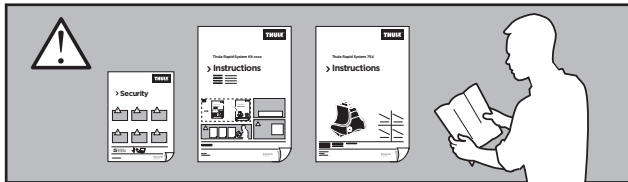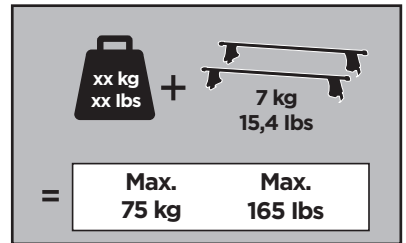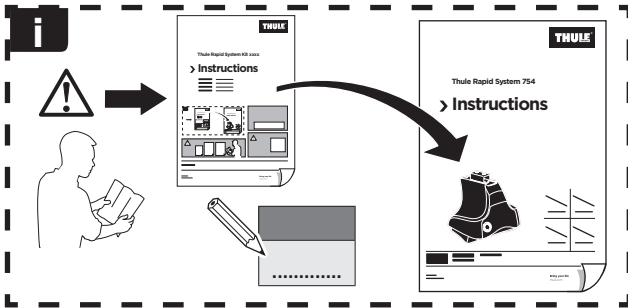

ISO 11154-E

141001


C.20130107
519-1001-01

Bring your life
thule.com




x1

07 x4





01 x4



x1

1

	X (scale)	X (mm)	X (inch)
AUDI 80/90 , 4-dr Sedan, 87-91, 92-94	20,5	856	33 ³ / ₄
AUDI 4000 , 4-dr Sedan, 87-91	20,5	856	33 ³ / ₄
AUDI 100/200 , 4-dr Sedan, 83-90	29	941	37

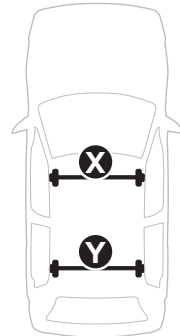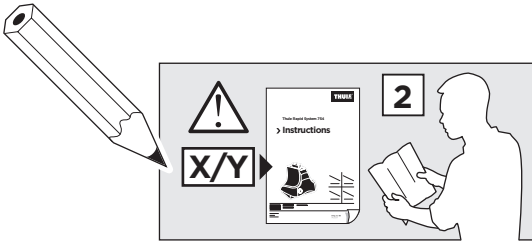



	Y (scale)	Y (mm)	Y (inch)
AUDI 80/90 , 4-dr Sedan, 87-91, 92-94	19	841	33 ¹ / ₈
AUDI 4000 , 4-dr Sedan, 87-91	19	841	33 ¹ / ₈
AUDI 100/200 , 4-dr Sedan, 83-90	27	921	36 ¹ / ₄

2


AUDI 80/90, 4-dr Sedan, 87-91, 92-94

AUDI 4000, 4-dr Sedan, 87-91

AUDI 100/200, 4-dr Sedan, 83-90

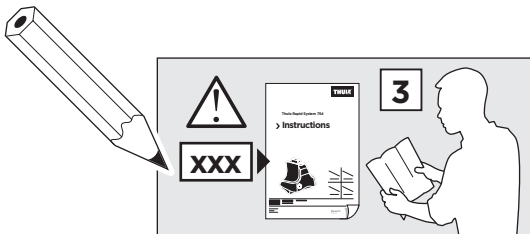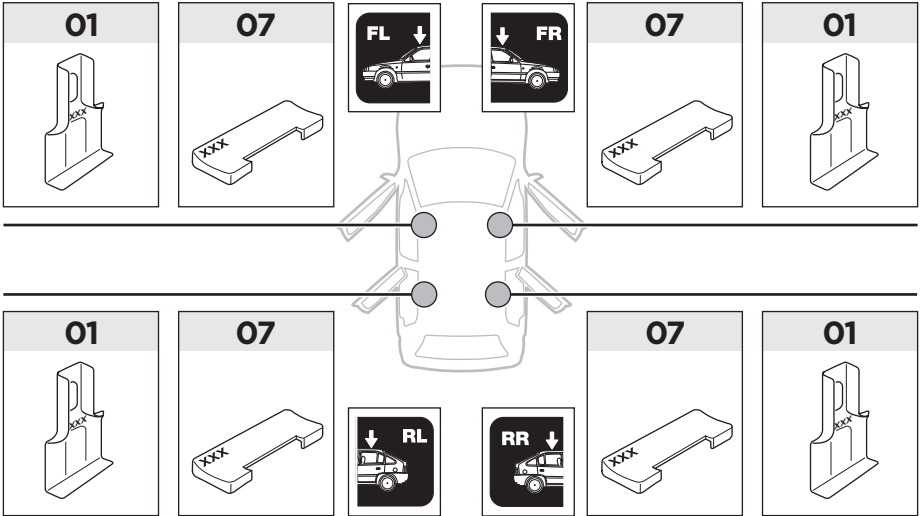

3

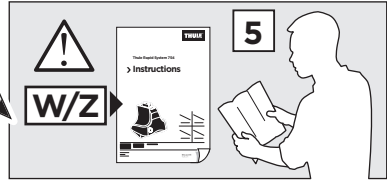

	W (mm)	Z (mm)	W (inch)	Z (inch)
AUDI 80/90 , 4-dr Sedan, 87-91, 92-94	270	700	10 ⁵/₈	27 ¹/₂
AUDI 4000 , 4-dr Sedan, 87-91	270	700	10 ⁵/₈	27 ¹/₂
AUDI 100/200 , 4-dr Sedan, 83-90	210	700	8 ¹/₄	27 ¹/₂

