





Thule Rapid System Kit 1627

> Instructions

FORD Focus, 4-dr Sedan, 12-

FORD Focus, 5-dr Hatchback, 12-

For cars without mounting holes in the door frame

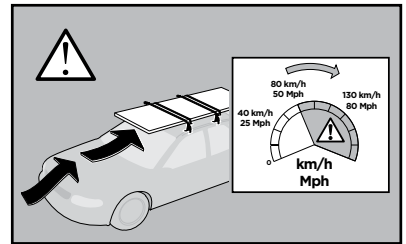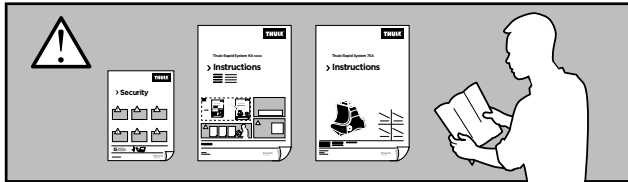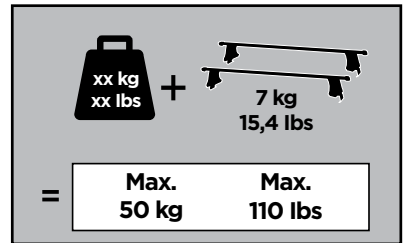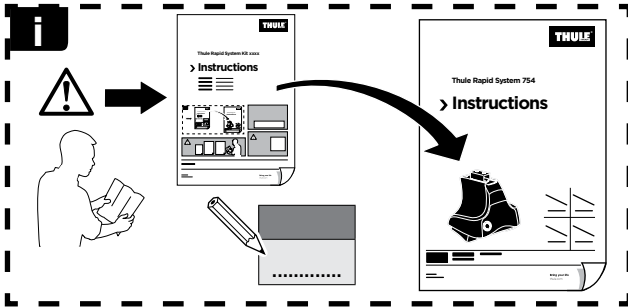

ISO 11154-E

141627


C.20121010
519-1627-01

Bring your life

thule.com




- 298 x1 ▶
- 299 x1 ▶
- 313 x1 ▶
- 314 x1 ▶



- ◀ 1152 x1
- ◀ 1153 x1
- ◀ 1154 x1
- ◀ 1155 x1





x1



x1

1



	X (scale)	X (mm)	X (inch)
FORD Focus, 4-dr Sedan, 12-	40	1051	41 ³/₈
FORD Focus, 5-dr Hatchback, 12-	40	1051	41 ³/₈

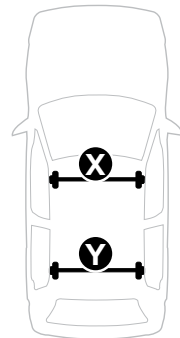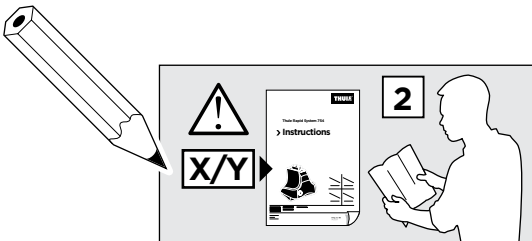


	Y (scale)	Y (mm)	Y (inch)
FORD Focus, 4-dr Sedan, 12-	36	1011	39 ³/₄
FORD Focus, 5-dr Hatchback, 12-	36	1011	39 ³/₄

2

FORD Focus, 4-dr Sedan, 12-
FORD Focus, 5-dr Hatchback, 12-

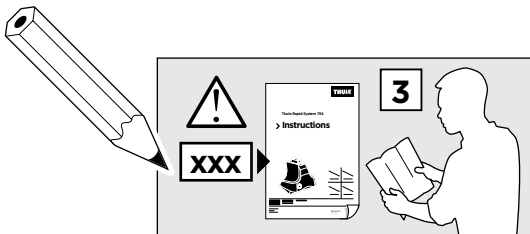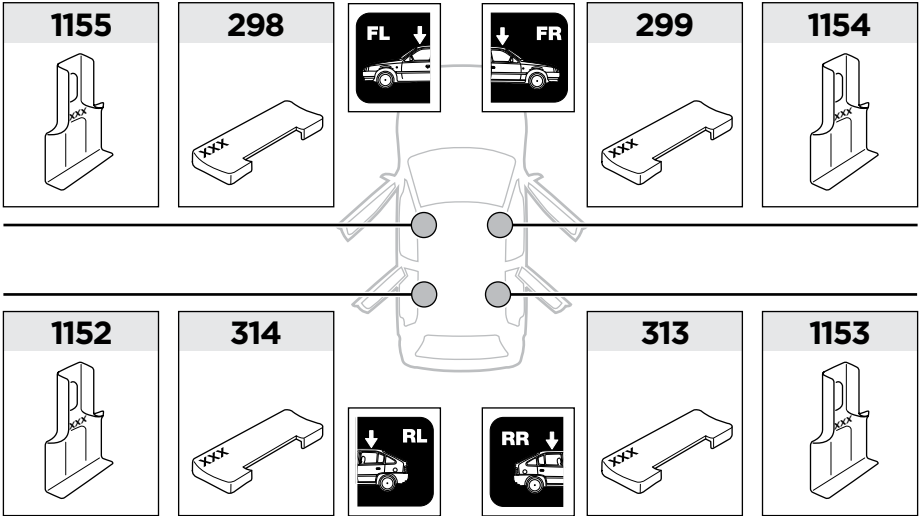

3

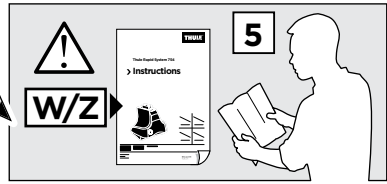

	W (mm)	Z (mm)	W (inch)	Z (inch)
FORD Focus, 4-dr Sedan, 12-	241	622	9 1/2	24 1/2
FORD Focus, 5-dr Hatchback, 12-	254	686	10	27

