

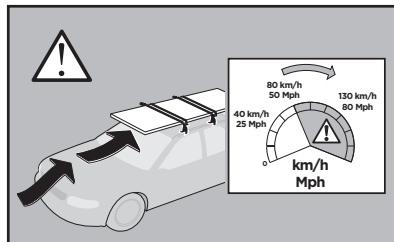
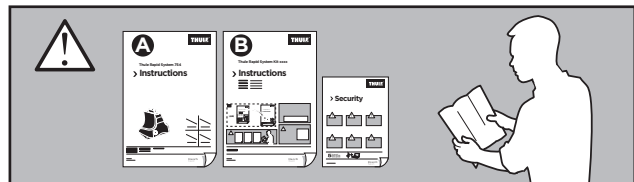


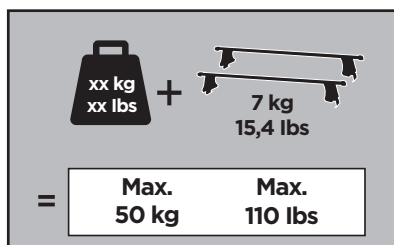

## Thule Rapid System Kit 1786

# > Instructions

CADILLAC ATS, 4-dr Sedan, 13-

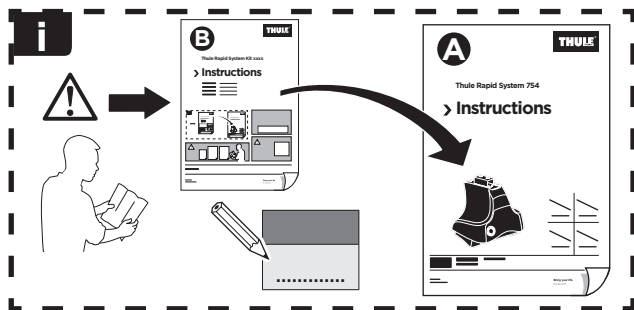


ISO 11154-E

141786  
C.20150316  
519-1786-01

Bring your life  
thule.com



266 x1




267 x1



331 x1



332 x1



578 x2



921 x2






x1



x1

1



	X (scale)	X (mm)	X (inch)
CADILLAC ATS, 4-dr Sedan, 13-	35,5	1006	39 <sup>5</sup> / <sub>8</sub>

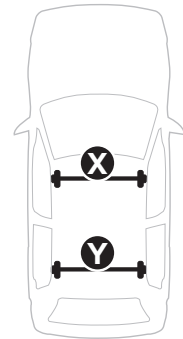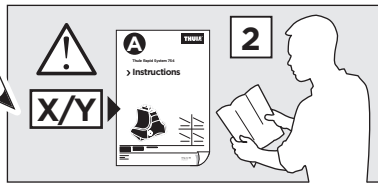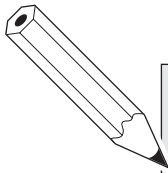



	Y (scale)	Y (mm)	Y (inch)
CADILLAC ATS, 4-dr Sedan, 13-	35,5	1006	39 <sup>5</sup> / <sub>8</sub>

**2**

**CADILLAC ATS, 4-dr Sedan, 13-**

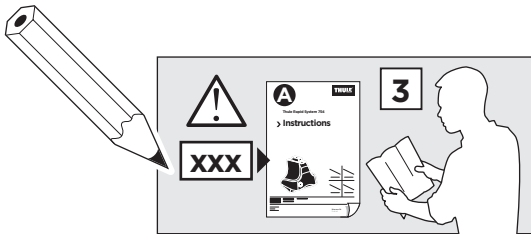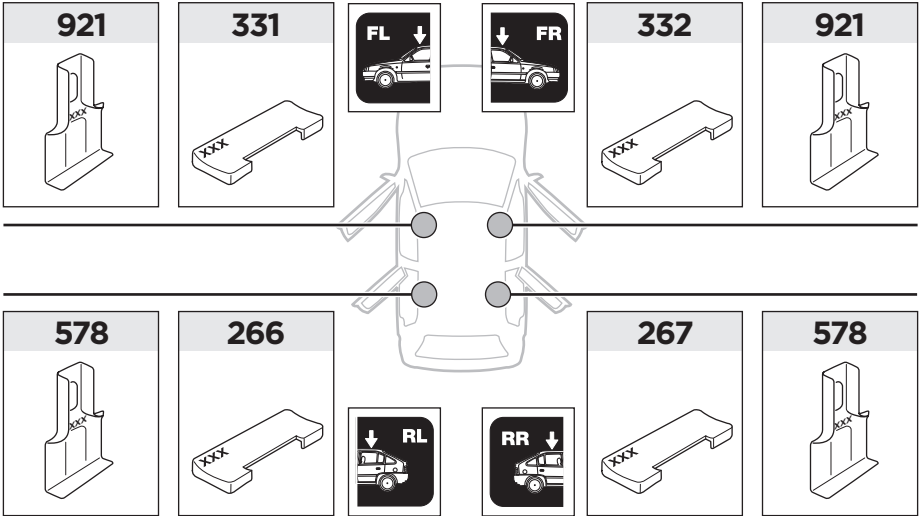

**3**

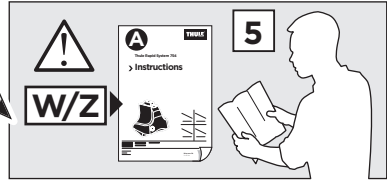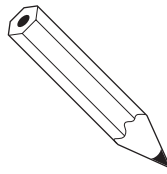

	W (mm)	Z (mm)	W (inch)	Z (inch)
<b>CADILLAC ATS, 4-dr Sedan, 13-</b>	<b>165</b>	<b>700</b>	<b>6 1/2</b>	<b>27 1/2</b>

